

VERTY NOVA 200
VERTY NOVA 400



Submersible pumps

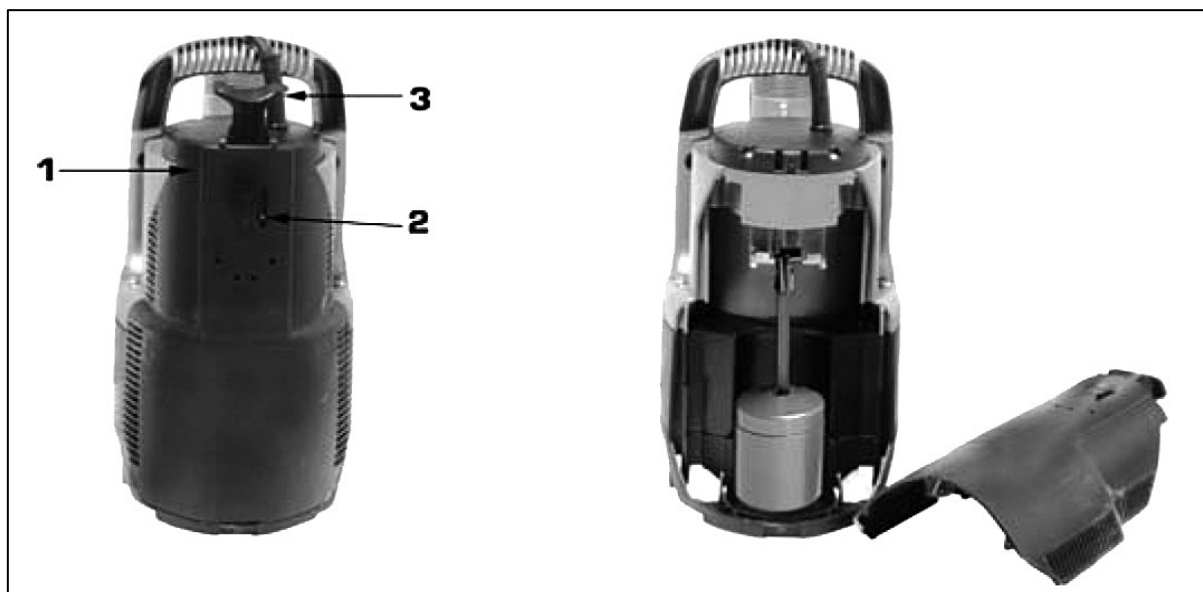


Figure A

Figure B

TABLE OF CONTENTS

1. SAFETY MEASURES	3
2. USE.....	3
3. STARTING THE PUMP.....	3
4. RECOMMENDATIONS	3
5. TROUBLESHOOTING	4

1. SAFETY MEASURES



Before starting the pump, read this instruction booklet carefully.



All contact with water should be avoided while the pump is connected to the electric power supply.



Protect the plug from humidity. The plug must be accessible when the pump is running.



Before taking any action on the pump, always remove the plug from the power socket.



Connect pumps that are delivered without cable and/or plugs to an external mains switch with a minimum contact gap of 3 mm in all poles.

2. USE

VERTY NOVA 200, VERTY NOVA 400: submersible pumps with integrated float switch specifically designed for uses in narrow pits with dimensions down to 7.87" x 7.87" (20 cm x 20 cm). Suitable to pump clear water containing particles with maximum diameter up to 0.19" (5 mm). The temperature of the fluid being pumped must never exceed 95°F (35°C).



The pump must not be used to pump salt water, sewage (ACI models), flammable, corrosive or explosive liquids (e.g. petroleum oil, petrol, thinners), grease, oils or foodstuffs.



Before starting the pump, make sure that:

- there are no signs of damage to the pump or its power cord.
- the electric connection is made in a dry place, protected against any risk of flooding.
- the length of the power cord is no more than 32.8 ft (10 meters). Any extension cords must comply with the requirements of the DIN VDE standard 0620.

3. STARTING THE PUMP

Insert the plug on the power cord in a suitable power socket.

VERTY NOVA 200 – VERTY NOVA 400

Automatic operation (A):

The integrated float switch starts and stops the pump automatically when the indicator (2) is positioned on "A" (Fig. A).

Manual operation (M):

To start the pump, lift the knob (3) positioning the indicator (2) on "M" (Fig. A). In these conditions the suction level of the pump will be down to 0.08"-0.12" (2-3 mm).

In order to check the correct working and clean the float switch open the cover (1) positioning the indicator on "O" (Fig. A-B).

4. RECOMMENDATIONS

To ensure the proper operation of the pump, it is important to comply with the following recommendations:

- **The pump must never be allowed to run dry.**
- Never leave the pump in operation when the delivery pipe is clogged.
- The pump must only be used when it is immersed in water. If the water runs out, the pump must be stopped immediately by removing the plug from the power supply.
- Pay careful attention when the pump is operated in manual mode.
- The pump must be placed in a stable position inside a collection pit or in the lowest part of the place where it is installed.
- The recommended dimensions for the pit are:
 - 7.87" x 7.87" (20 cm x 20 cm) for models VERTY NOVA 200-VERTY NOVA 400

ENGLISH

- It is absolutely essential to prevent any risk of the pump freezing. In the event of freezing temperatures, remove the pump from the liquid, empty it and keep it in a place where it cannot freeze.
- To avoid the obstruction of the suction side, periodically, it is advisable to make sure that no dirt (leaves, sand, etc.) has been accumulated in the collection pit.

Overload protection

The pump has a thermal overload safety device. In the event of any overheating of the motor, this device automatically switches off the pump. The cooling time is roughly 15 to 20 minutes, then the pump automatically comes on again. If the overload cutout is tripped, it is essential to identify and deal with the cause of the overheating. See Troubleshooting.

5. TROUBLESHOOTING



Before taking any troubleshooting action, disconnect the pump from the power supply (i.e. remove the plug from the socket).

Fault	Possible causes	Solutions
The motor does not start or makes no noise.	A) Make sure the motor is powered. B) The pump is not enabled by the float	B) - Make sure the float can move freely. - Increase the depth of the pit.
The pump delivers no water.	A) The suction grid or piping are clogged. B) The impeller is worn or stuck. C) The required head is too high for the characteristics of the pump. D) Water level under the suction minimum.	A) Remove the obstruction. B) Replace the impeller or remove the obstruction.
The pump does not stop.	A) The pump is not disabled by the float.	A) Make sure the float can move freely.
The flow rate is too low.	A) Make sure the suction grid is not partially clogged. B) Make sure the impeller or delivery pipe are not partially clogged or fouled.	A) Remove any obstructions. B) Remove any obstructions.
The pump stops running (possible intervention of the thermal overload switch).	- Make sure the fluid being pumped is not too dense, causing the motor to overheat. - Make sure the temperature of the water is not too high. - Make sure there is no solid body obstructing the impeller. - Power supply doesn't comply with the nameplate's data.	Disconnect the power cord, correct the reason for overheating; then wait until the pump is cooled, plug the cord and resume operation.

DAB PUMPS LTD.

6 Gilbert Court
Newcomen Way
Severalls Business Park
Colchester
Essex
CO4 9WN - UK
salesuk@dwtgroup.com
Tel. +44 0333 777 5010

DAB PUMPS BV

'tHofveld 6 C1
1702 Groot Bijgaarden - Belgium
info.belgium@dwtgroup.com
Tel. +32 2 4668353

DAB PUMPS INC.

3226 Benchmark Drive
Ladson, SC 29456 - USA
info.usa@dwtgroup.com
Tel. 1- 843-797-5002
Fax 1-843-797-3366

OOO DAB PUMPS

Novgorodskaya str. 1, block G
office 308, 127247, Moscow - Russia
info.russia@dwtgroup.com
Tel. +7 495 122 0035
Fax +7 495 122 0036

DAB PUMPS POLAND SP. z.o.o.

Ul. Janka Muzykanta 60
02-188 Warszawa - Poland
polska@dabpumps.com.pl

DAB PUMPS (QINGDAO) CO. LTD.

No.40 Kaituo Road, Qingdao Economic &
Technological Development Zone
Qingdao City, Shandong Province - China
PC: 266500
sales.cn@dwtgroup.com
Tel. +86 400 186 8280
Fax +86 53286812210

DAB PUMPS IBERICA S.L.

Calle Verano 18-20-22
28850 - Torrejón de Ardoz - Madrid
Spain
Info.spain@dwtgroup.com
Tel. +34 91 6569545
Fax: + 34 91 6569676

DAB PUMPS B.V.

Albert Einsteinweg, 4
5151 DL Drunen - Nederland
info.netherlands@dwtgroup.com
Tel. +31 416 387280
Fax +31 416 387299

DAB PUMPS SOUTH AFRICA

Twenty One industrial Estate,
16 Purlin Street, Unit B, Warehouse 4
Olifantsfontein - 1666 - South Africa
info.sa@dwtgroup.com
Tel. +27 12 361 3997

DAB PUMPS GmbH

Am Nordpark 3
41069 Mönchengladbach, Germany
info.germany@dwtgroup.com
Tel. +49 2161 47 388 0
Fax +49 2161 47 388 36

DAB PUMPS HUNGARY KFT.

H-8800
Nagykanizsa, Buda Ernő u.5
Hungary
Tel. +36 93501700

DAB PUMPS DE MÉXICO, S.A. DE C.V.

Av Amsterdam 101 Local 4
Col. Hipódromo Condesa,
Del. Cuauhtémoc CP 06170
Ciudad de México
Tel. +52 55 6719 0493

DAB PUMPS OCEANIA PTY LTD

426 South Gippsland Hwy,
Dandenong South VIC 3175 – Australia
info.oceania@dwtgroup.com
Tel. +61 1300 373 677

**DAB PUMPS S.p.A.**

Via M. Polo, 14 - 35035 Mestrino (PD) - Italy
Tel. +39 049 5125000 - Fax +39 049 5125950
www.dabpumps.com